

ARC Motor Programming


Please read these instructions prior to starting

The instructions for the hard-wired and battery ARC motor are the same.


P2 = The button on the top left under the battery cover.

**Check if the remote is unlocked.
Limits cannot be changed with a
locked remote**


Locate the lock button on
the right top of the battery
compartment

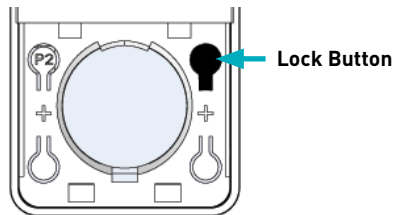

Tap this button and watch the
screen.

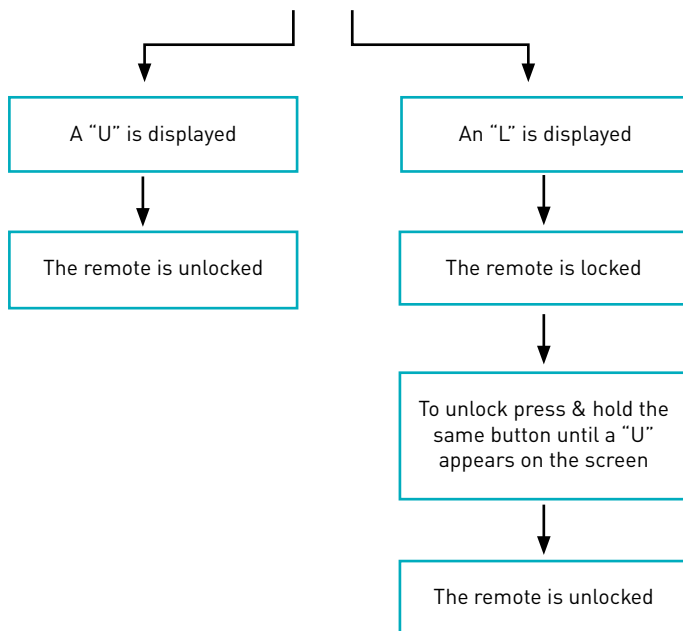

Adjust Top Limit

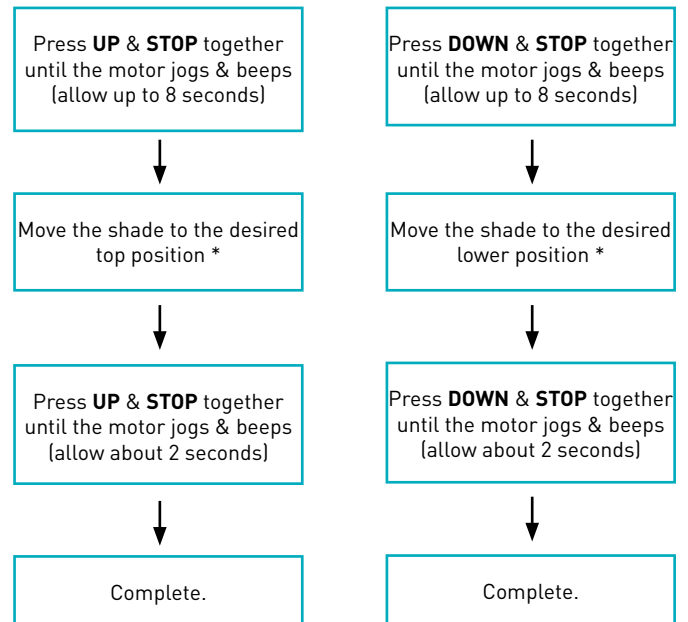

* Tapping the **UP** and **DOWN** buttons moves the shade in small steps.
Holding the **UP & DOWN** buttons moves the blind quicker.

ARC Motor Programming


Please read these instructions prior to starting

The instructions for the hard-wired and battery ARC motor are the same.

P2 = The button on the top left under the battery cover.


Adding or removing a channel on the same remote, using P1

This is the recommended method.

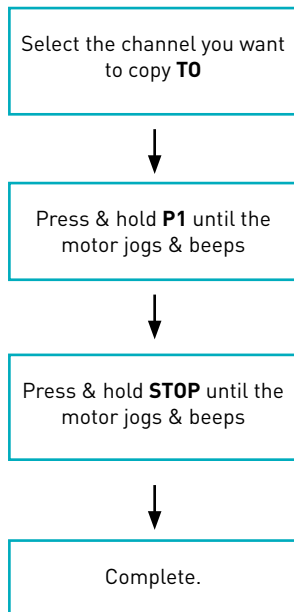


Adding or removing a channel on another remote, using P1

This is the recommended method.

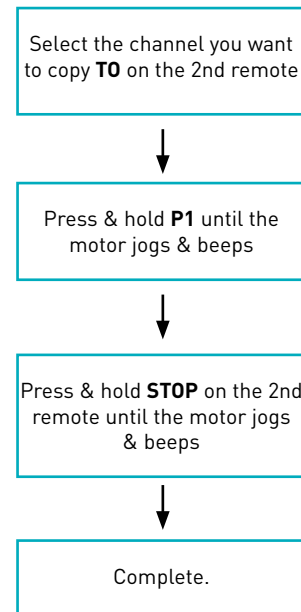


Adding or removing a channel on the same remote, using P2

Use this method only if you cannot reach P1

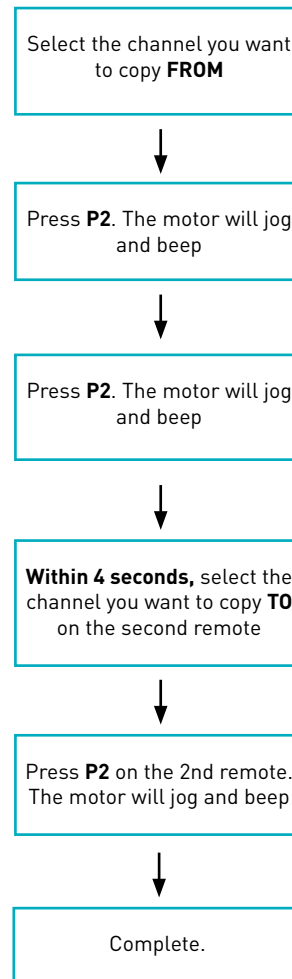

Adding or removing a channel on another remote, using P2

Use this method only if you cannot reach P1

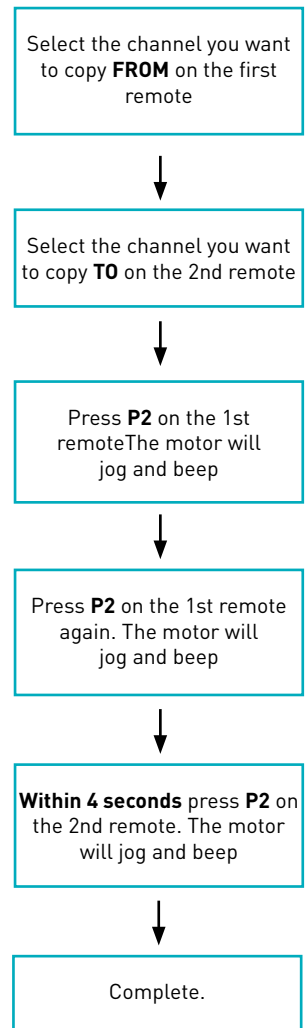

Important note: it is not possible to delete all channels from a motor. 1 channel must always be active

For the complete ARC battery motor manual. Scan Here.



For the complete ARC hard-wired AC motor manual. Scan Here.



For the complete ARC hard-wired DC motor manual. Scan Here.

