

SUPPLEMENTARY INSTRUCTIONS

Ensure the wind rain and light sensor functionality on the motor is enabled prior to pairing the wind sun and rain sensor.

Enable wind rain and light sensor functionality

1.1 Pair Motor With Controller

1.2 Once paired to the motor:

PRESS **P2** ON CONTROLLER



Motor Response



PRESS **UP** ON CONTROLLER



Motor Response



PRESS **STOP** ON CONTROLLER



Motor Response



1.3 Repeating this function disables the wind rain and light sensor functionality:

PRESS **P2** ON CONTROLLER



Motor Response



PRESS **UP** ON CONTROLLER



Motor Response



PRESS **STOP** ON CONTROLLER



Motor Response



1.4 Pairing Wind rain and light sensor to Motor:

On Remote

PRESS **P2** ON CONTROLLER



Motor Response



PRESS **P2** ON CONTROLLER



Motor Response



On Sensor

PRESS **P2** TO WAKE THE SENSOR



PRESS **P2** AGAIN ON THE SENSOR TO ADD OR REMOVE IT.



Motor Response

