


TOOLS REQUIRED

1. Smooth Spline 5mm 2.Flat Spline 9mm 3. Hem Bar Fabric Crease Tool 4. Cutter/Scissor


FABRIC PREPARATION

With Jig


- 1** Secure fabric and hem bar in place with clamp and jig

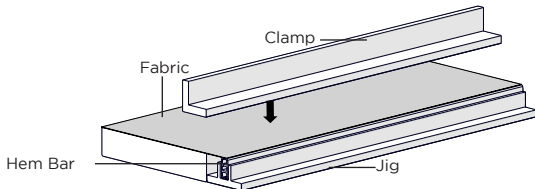

- 2** Crease the fabric into the Hem bar

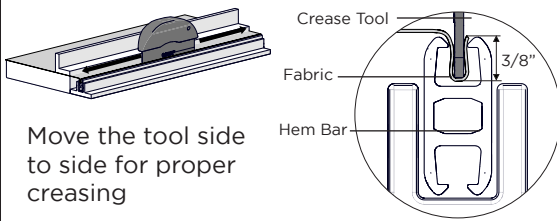


- 3** Cut the 5mm round spline diagonally and slide into hem bar

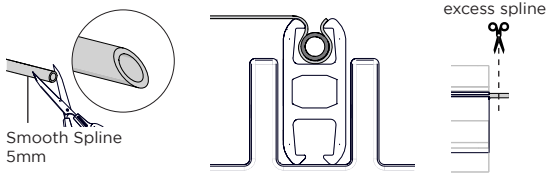


Without Jig

- 1** Attach Flat spline 9mm onto the fabric

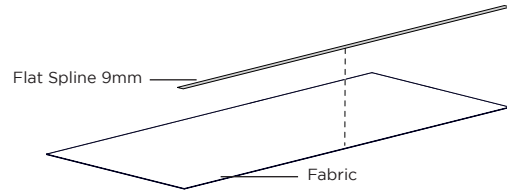


- 2** Fold the fabric as shown below and slide into the Hem bar

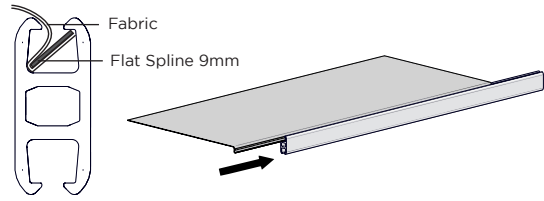


HALF WRAP ASSEMBLY (REQUIRES AN ADDITIONAL 3-1/8" OF FABRIC)


- 1** Wrap the fabric around the hem bar

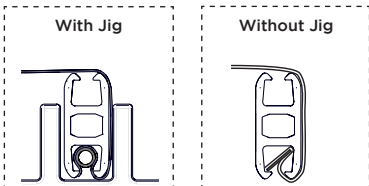

- 2** Crease the fabric into the hem bar as per *Fabric Preparation - Step 2*

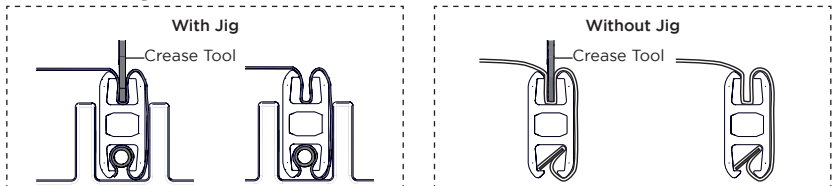

- 3** Slide spline into hem bar as per *Fabric Preparation - Step 3*

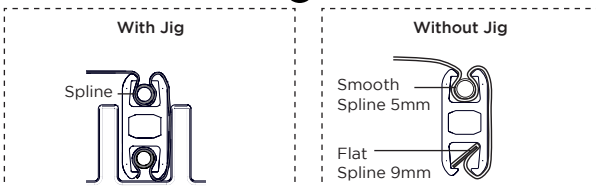

- 4** Complete by attaching end caps on both ends



FULL WRAP ASSEMBLY (REQUIRES AN ADDITIONAL 5-1/8" OF FABRIC)

1 Slide the spline into hem bar

Spline

Cut off the excess spline

2 Wrap the fabric around the hem bar

3 Crease the fabric into the hem bar as per *Fabric Preparation - Step 2*

Crease Tool

4 Slide spline into hem bar as per *Fabric Preparation - Step 3*

Spline

5 Wrap the fabric around the hem bar

6 Remove the top Spline

7 Crease the fabric into the hem bar as per *Fabric Preparation - Step 2*

Crease Tool

8 Slide spline into hem bar as per *Fabric Preparation - Step 3*

Spline


9 Complete by attaching end caps on both ends

End Cap

End Cap


HEM BAR HANDLE

- 1 Snap the hem bar handle onto the hem bar

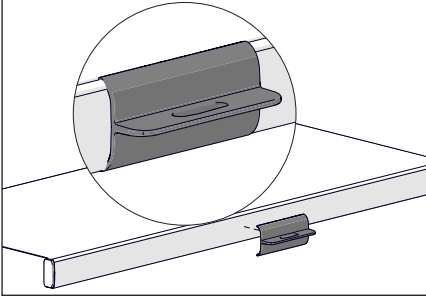


HANDLE PULL HOOK

- 1 Adjust the length of the pull hook

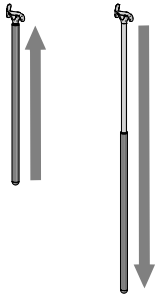

- 2 Use the pull hook to move the handle down

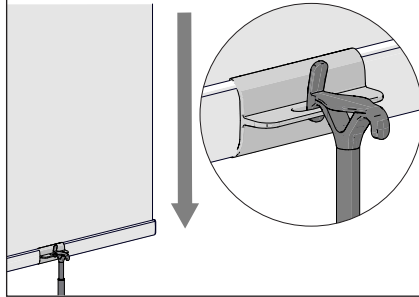

- 3 Use the pull hook to move the handle up

