


TOOLS REQUIRED

1. 5mm Smooth Spline: For fabrics up to 0.75mm (0.029").
3mm Round Spline: For fabrics between 0.75mm (0.029") and 1.3mm (0.051").
2. 9mm Flat Spline
3. Hem Bar Fabric Crease Tool
4. Cutter/Scissor


FABRIC PREPARATION

With Assembly Table


- 1** Secure fabric and Hem Bar in place

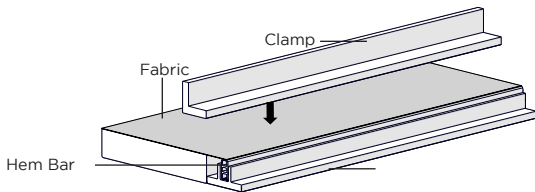

- 2** Crease the fabric into the Hem Bar

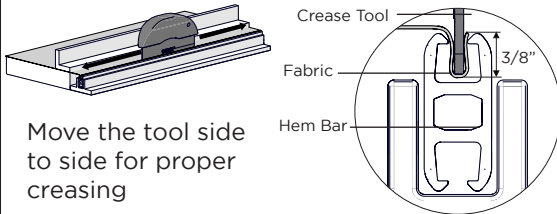


- 3** Cut the Round Spline diagonally and slide into Hem Bar

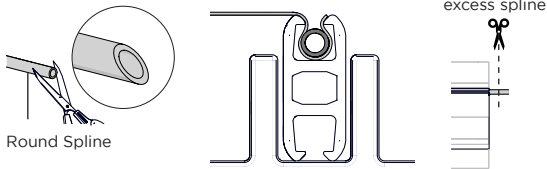


Without Assembly Table

- 1** Attach 9mm Flat Spline onto the fabric

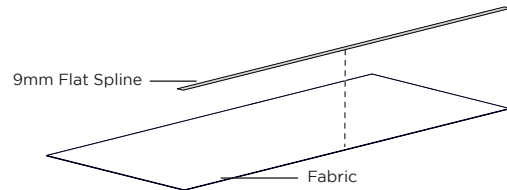


- 2** Fold the fabric as shown below and slide into the Hem Bar

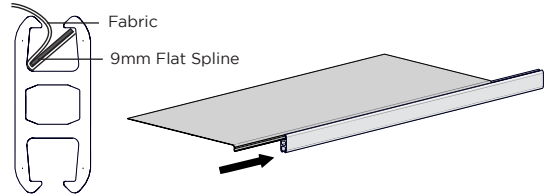

HALF WRAP ASSEMBLY (REQUIRES AN ADDITIONAL 3-1/8" OF FABRIC)

- 1** Wrap the fabric around the Hem Bar

With Table

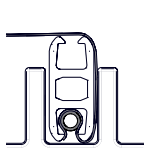


Without Table




- 2** Crease the fabric into the Hem Bar as per *Fabric Preparation - Step 2*

With Table

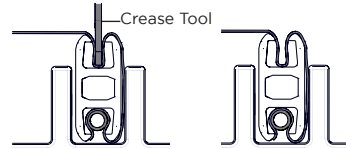


Without Table

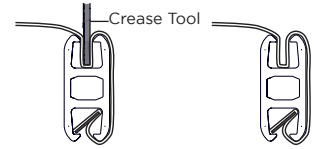


- 3** Slide spline into Hem Bar as per *Fabric Preparation - Step 3*

With Table

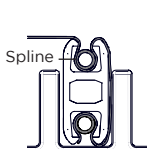

Without Table

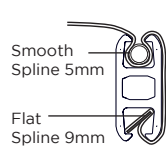

- 4** Complete by attaching end caps on both ends



FULL WRAP ASSEMBLY (REQUIRES AN ADDITIONAL 5-1/8" OF FABRIC)

1 Slide the Round Spline into Hem Bar

2 Wrap the fabric around the Hem Bar

3 Crease the fabric into the Hem Bar as per *Fabric Preparation - Step 2*

4 Slide Round Spline into Hem Bar as per *Fabric Preparation - Step 3*

5 Wrap the fabric around the Hem Bar

6 Remove the top Spline


7 Crease the fabric into the Hem Bar as per *Fabric Preparation - Step 2*

8 Slide Round Spline into Hem Bar as per *Fabric Preparation - Step 3*

9 Complete by attaching end caps on both ends


HEM BAR HANDLE

- 1 Snap the Hem Bar Handle onto the Hem Bar

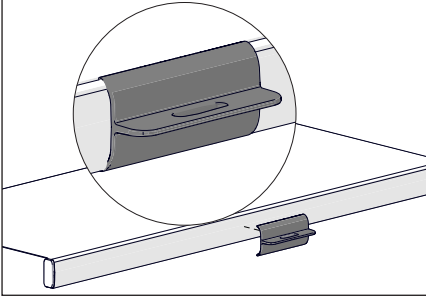


HANDLE PULL HOOK

- 1 Adjust the length of the pull hook

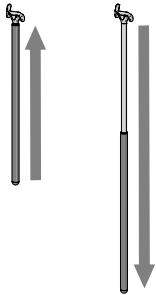

- 2 Use the pull hook to move the handle down

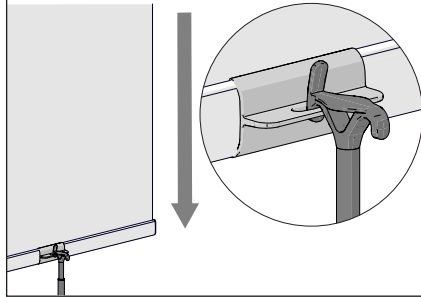

- 3 Use the pull hook to move the handle up

