


CU40 & CU41 Panel Glide

INSTALLATION MANUAL


ROLLEASE ACMEDA
PRECISION IN MOTION

INSTALLATION

CU40 & CU41 PANEL GLIDE SYSTEM

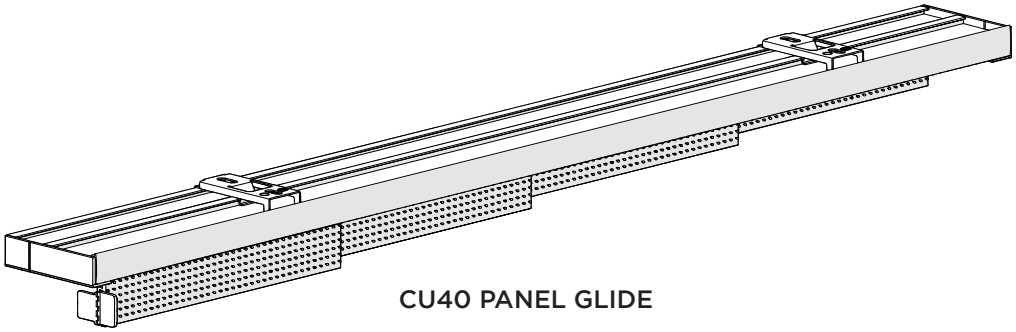

CU40 PANEL GLIDE

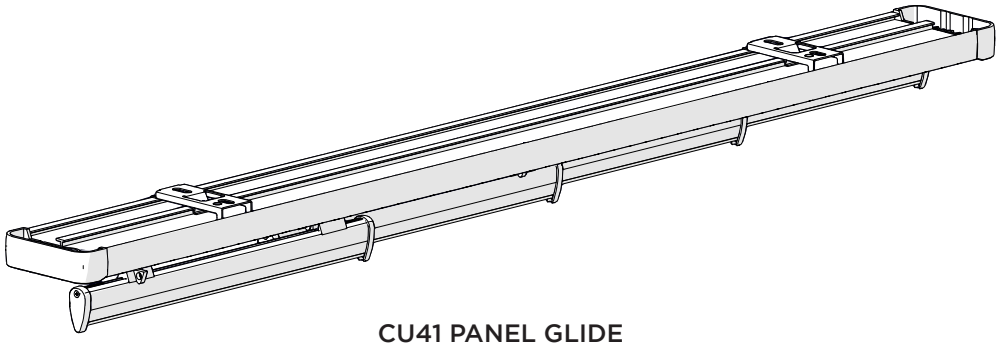

CU41 PANEL GLIDE

DISCLAIMER

INTRODUCTION

This installation manual for CU40 & CU41 Panel Glide has been produced by Rollease Acmeda to supply the necessary information for the safe and correct installation of CU40 & CU41 Panel Glide.

DISCLAIMER

Rollease Acmeda has used reasonable care in preparing the information included in this document, but makes no representations or warranties as to the completeness or accuracy of the information. Information is supplied upon the condition that the persons receiving the information will make their own determination as to its suitability for their purposes prior to use. Rollease Acmeda assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein. Rollease Acmeda reserves the right to make changes without further notice to any products to improve reliability, function or design.


COPYRIGHT

COPYRIGHT © ROLLEASE ACMEDA


All rights are reserved. No part of this document may be reproduced or utilised in any means, by any means, electronic or mechanical including photocopying, recordings, or by any information storage or retrieval system, without the express permission from Rollease Acmeda.

ROLLEASE ACMEDA

STEP 1 - SECURE TOP FIX BRACKETS EVERY 1000 - 1200MM

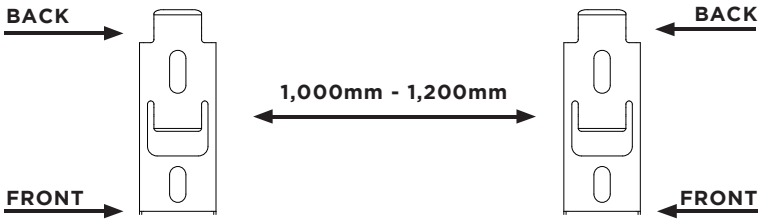


STEP 2 - INSTALL CU40 OR CU41 PANEL GLIDE SYSTEM INTO BRACKETS AS SHOWN BELOW.

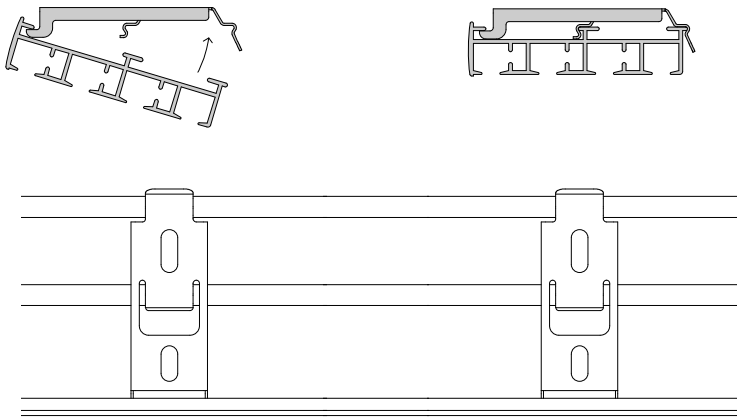


STEP 3 - ATTACH FABRIC TO PANEL BARS.

Insert the fabric as detailed below using a 9mm Flat Spline attached to the Fabric and slide along Panel Bar. Once the Fabric has been inserted into position replace the end cap and fasten end cap screw.

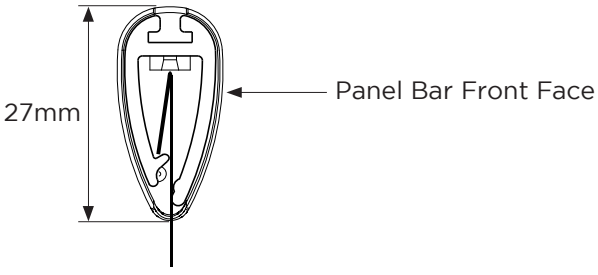

The Panel Bar & Bottomrail both use 9mm flat spline to attach fabric.

D30 Bottomrail (Optional)

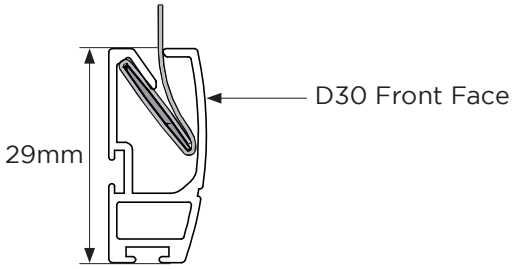

The D30 Bottomrail uses 15mm flat spline to attach fabric.

2022 © Copyright All Rights Reserved Rollease Acmeda



rolleaseacmeda.com