



S24/M33 Curtain System

INSTALLATION MANUAL

v1.0 | August 2026

CONTENTS

SECTION A TOOLS AND CHART	3
TOOLS REQUIRED	3
BRACKET CHART	3
SECTION B CURTAIN ITEMS	4
MANUAL SYSTEM	4
MOTORISED SYSTEM	4
SECTION C CURTAIN SYSTEM INSTALLATION	4
JOINER PREPARATION	4
RECOMMENDED BRACKETS SPACING	5
BRACKET & TRACK INSTALLATION - CEILING FIX	5
BRACKET & TRACK INSTALLATION - FACE FIX	6
FACE FIX DOUBLE BRACKET INSTALLATION	7
ADJUST DRIFT GUARD PENDANT	8
CURTAIN FABRIC INSTALLATION AND FINAL ADJUSTMENT	8
MOTOR INSTALLATION	9
ATTACHING THE BATTERY OR AC MODULE TO THE MOTOR	10

DISCLAIMER

INTRODUCTION

This installation manual has been produced by Rollease Acmeda to supply the necessary information for the safe and correct installation of S24/M33 Curtain System.

DISCLAIMER

Rollease Acmeda has used reasonable care in preparing the information included in this document, but makes no representations or warranties as to the completeness or accuracy of the information. Information is supplied upon the condition that the persons receiving the information will make their own determination as to its suitability for their purposes prior to use. Rollease Acmeda assumes no liability whatsoever for any damages incurred by you resulting from errors in or omissions from the information included herein. Rollease Acmeda reserves the right to make changes without further notice to any products to improve reliability, function or design.


COPYRIGHT

COPYRIGHT © ROLLEASE ACMEDA

All rights are reserved. No part of this document may be reproduced or utilised in any means, by any means, electronic or mechanical including photocopying, recordings, or by any information storage or retrieval system, without the express permission from Rollease Acmeda.


TOOLS REQUIRED

Measuring Tape

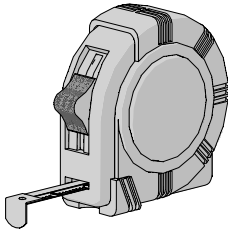


Screwdriver

Philips Head (No.1 & No. 2)
Flat Head (1mm & 2mm)

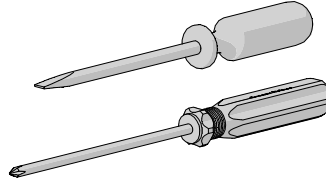


Mallet

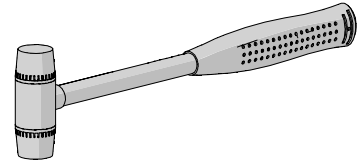

Scissors



Pencil





Allen Key (2mm)



BRACKET CHART

LENGTH RANGE	BRACKETS REQUIRED	+ BRACKETS TO SUPPORT CURTAIN STACK	TOTAL BRACKETS
Up to 600	2	0	2
601 - 1200	3		3
1201 - 1800	4		4
1801 - 2400	5		5
2401 - 3000	6	2	8
3001 - 3600	7		9
3601 - 4000	8		10
4001 - 4200	8	4	12
4201 - 4800	9		13
4801 - 5400	10		14
5401 - 6000	11		15
6001 - 6600	12	6	18
6601 - 7200	13		19
7201 - 7800	14		20
7801 - 8000	15		21
8001 - 8400	15	8	23
8401 - 9000	16		24
9001 - 9600	17		25
9601 - 10000	18		26



MANUAL SYSTEM

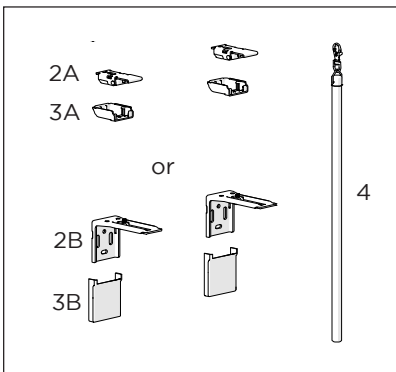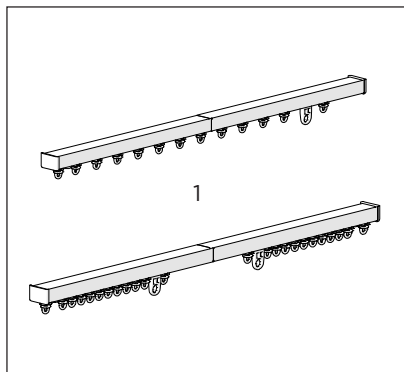

SYSTEM INDEX:

1. **S24 OR M33 TRACK ASSEMBLY**
2. **BRACKETS** (*See bracket chart*)
 - A - Ceiling Bracket
 - B - Face Fix Bracket
3. **BRACKET COVER SET**
 - A - Ceiling Bracket
 - B - Face Fix Bracket
4. **WAND**

MOTORISED SYSTEM

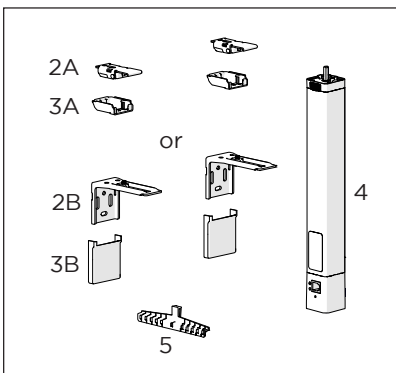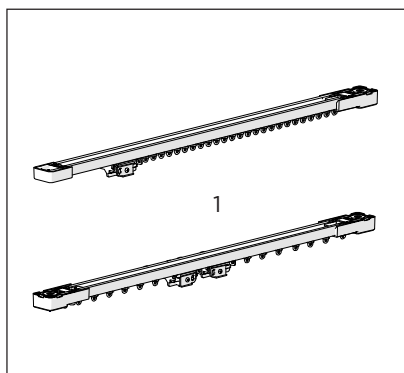

SYSTEM INDEX:

1. **M33 TRACK ASSEMBLY**
2. **BRACKETS** (*See bracket chart*)
 - A - Ceiling Bracket
 - B - Face Fix Bracket
3. **BRACKET COVER SET**
 - A - Ceiling Bracket
 - B - Face Fix Bracket
4. **MOTOR**
5. **HOOKS**


SECTION C | CURTAIN SYSTEM INSTALLATION

JOINER PREPARATION

If Required


S24	M33
Slide joiner into S24 track and use a 2mm allen key to tighten screw. Make sure a bracket is used over the joined section for maximum support.	Slide joiner on top of M33 track and use a 2mm allen key to tighten screw. Make sure a bracket is used over the joined section for maximum support.

RECOMMENDED BRACKETS SPACING

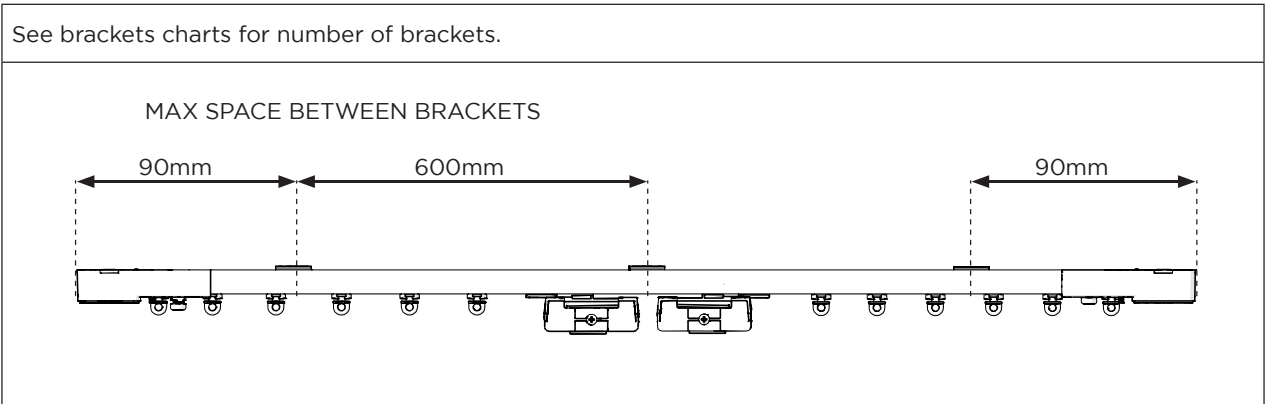


BRACKET & TRACK INSTALLATION - CEILING FIX


NOTE	
The M33 includes an additional slot compared to the S24. For heavier systems, it is recommended that both the front and rear slots of the M33 be used.	
S24	M33
1 Attach S24 ceiling bracket to ceiling. For S24	1a Attach M33 ceiling bracket to ceiling. For M33

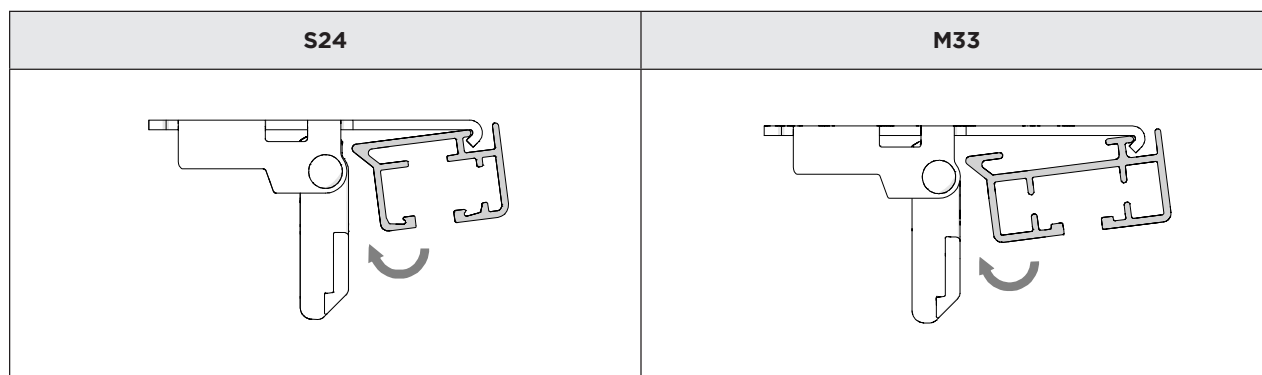

- 1** With bracket levers in the unlock position, lift and install the S24 or M33 track assembly.

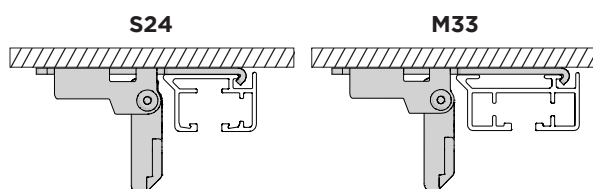

- 2** Swing the lever (45°) to the hold position to allow lateral adjustment of the track, if required.

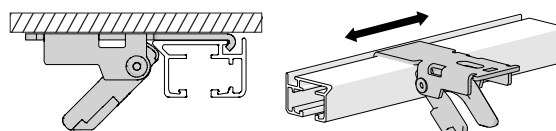

- 3** Once the track is in the correct position, secure the lever in the locked position.




BRACKET & TRACK INSTALLATION - FACE FIX




NOTE


Ensure the correct bracket is used for the S24 and M33 track. Attach the bracket assembly to the wall.

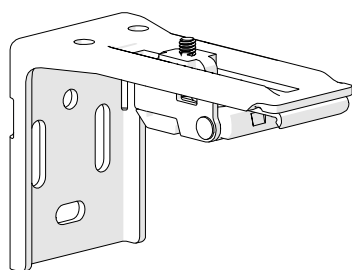


S24

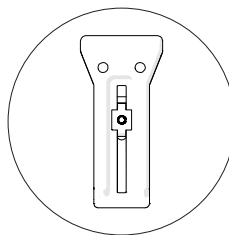


M33

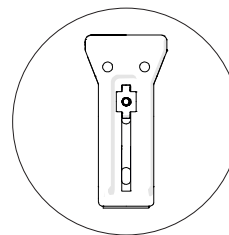



- 1 With bracket levers in the unlock position, lift and install the S24 or M33 track assembly onto the face fix bracket.

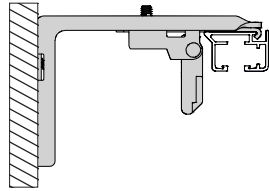

- 2 Swing the lever (45°) to the hold position to allow lateral adjustment of the track, if required.

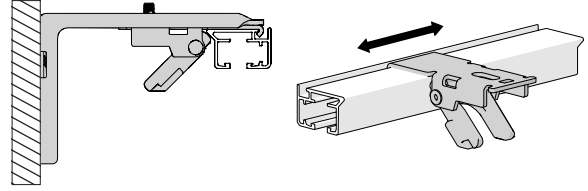

- 3 Once the track is in the correct position, secure the lever in the locked position.

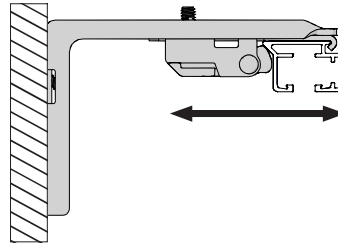
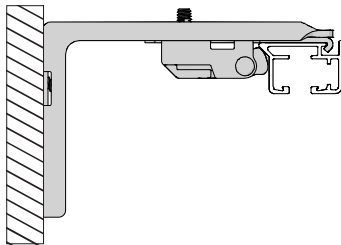


NOTE

Screw can be loosened to extend or retract mounting bracket


FACE FIX DOUBLE BRACKET INSTALLATION

- 1 Using the fasteners provided, install the M33 or S24 ceiling bracket on the front and back of the face fix double bracket.

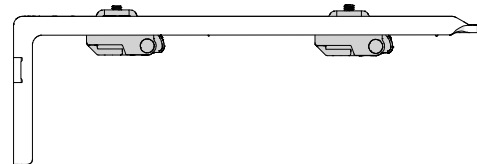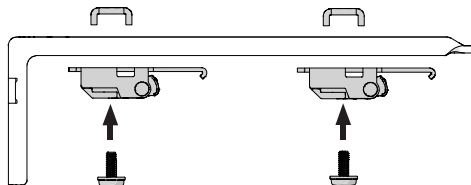


NOTE





Ensure the brackets are aligned and the bracket lever is in the unlocked position.

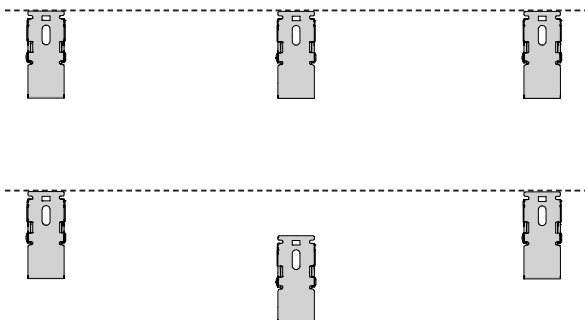

UNLOCKED

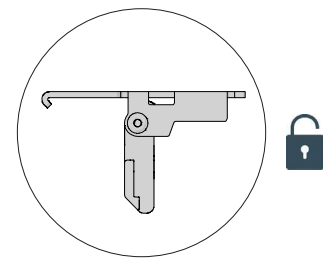


ADJUST DRIFT GUARD PENDANT**If Required**

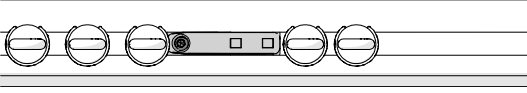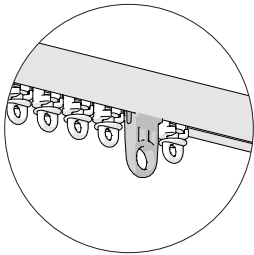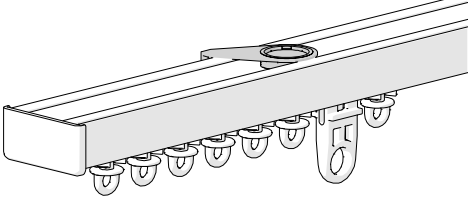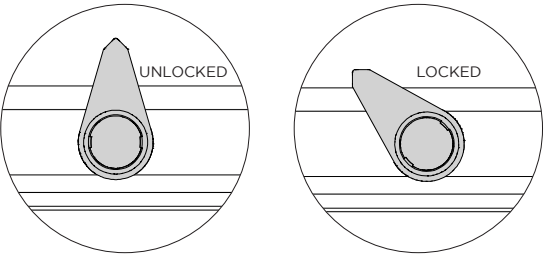
S24	M33
1A Use a 2 mm allen key, adjust the friction pendant housing so the magnet sits between the first and second leading pendants. Ensure the pendant and housing are aligned.  	1B Rotate the swivel magnet to an unlocked position. Slide it so it sits between the first and second leading pendants. Ensure the pendant and swivel magnet are aligned.  

CURTAIN FABRIC INSTALLATION AND FINAL ADJUSTMENT

- 1** Attach Curtain Fabric to pendants in S24 or M33 System.

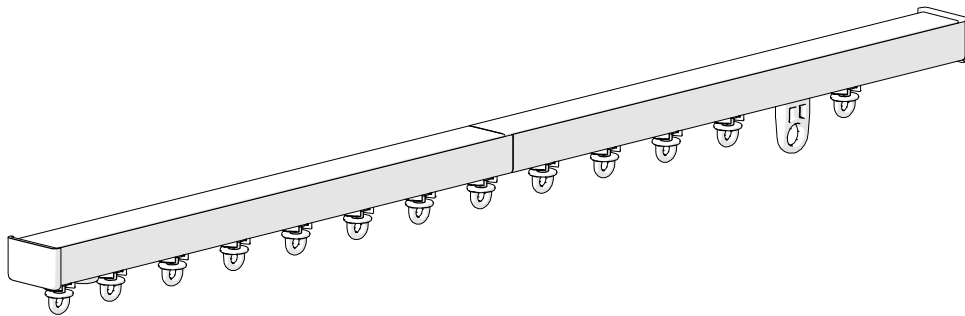


- 2** Attach wand to friction pendant. (If no friction pendant is used, attach to leading pendant.)

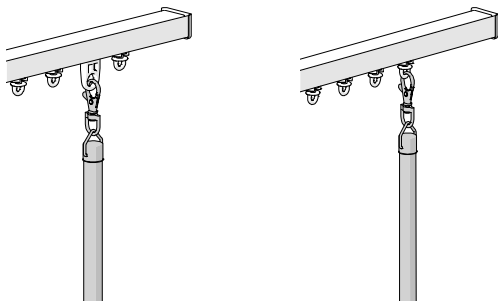

CEILING BRACKET COVER


FACE FIX BRACKET COVER

Align and clip the bracket covers in place.

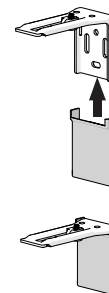


MOTOR INSTALLATION


- 1** Slide the lock button on the motor fully to the left against the spring force

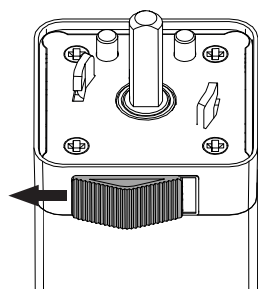


- 2** Align and engage the motor with the drive pulley as shown.

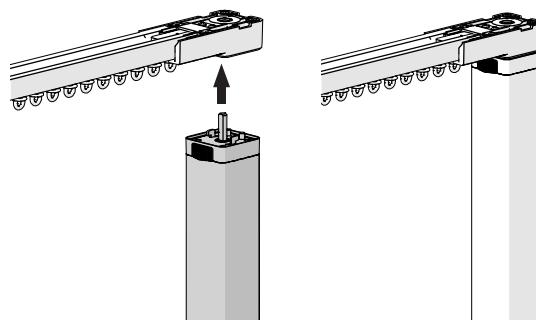

- 3** Push the lock button on the motor fully to the right to ensure the motor is securely attached to the pulley.

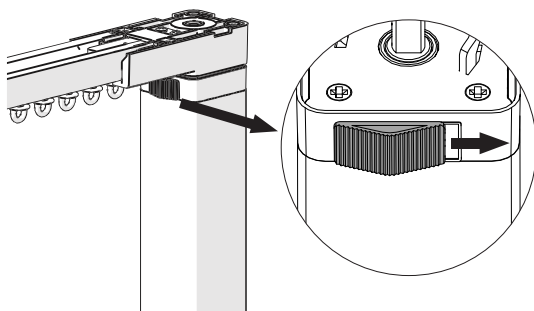


- 4** Check the motor and pulley are securely attached by trying to pull them apart.

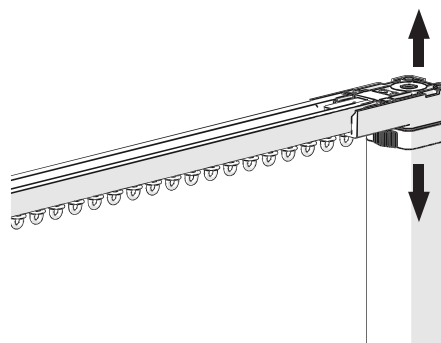


ATTACHING THE BATTERY OR AC MODULE TO THE MOTOR


- 1** Slide the lock button on the battery or AC module to the left against the spring force.

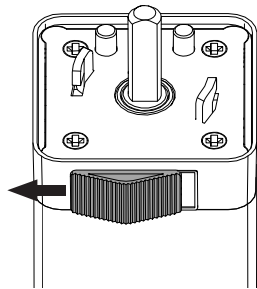

- 2** Align and engage the battery or AC module to the motor as shown.

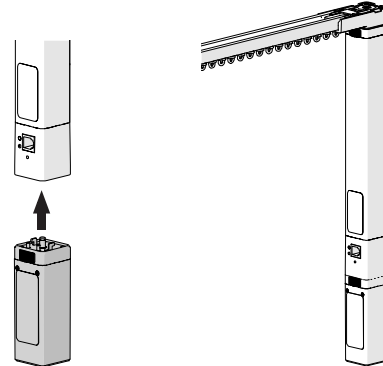


- 3** Push the lock button on the module fully to the right to ensure the two are securely attached.

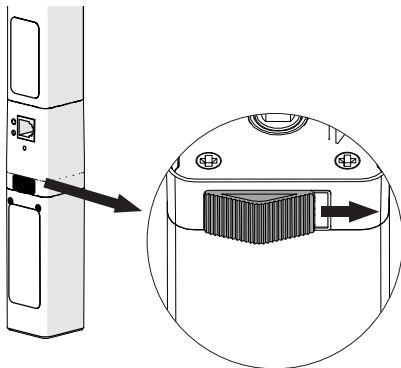

- 4** Check the motor and the module are securely attached by trying to pull them apart.



- 5** Attach the relevant end hooks to the motor drive.

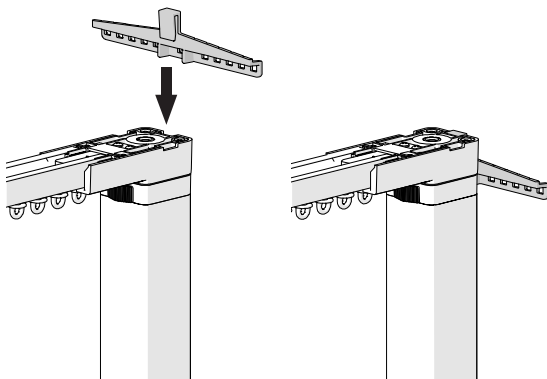

- 6** Installation complete.

