# AUTOMATE | E ARC TUBULAR AC MOTOR



AUTOMATE | E tubular AC motors combine the simple, intuitive features of ARC "Automate Radio Communication" with the higher lifting capacity of an AC motor for larger shade applications.

Leveling Control allows for precise positioning of individual or multiple shades ensuring perfect alignment every time whilst bi-directional communication ensures you can always keep track of your shades position when integrated into smart home applications.

#### FEATURES:

- Electronic Limits
- A/C Line Voltage (available for both 100V-120V & 220V-240V applications)
- 433 MHz Bi-Directional RF Communication
- Leveling Control
- Favorite Position
- Roller & Tilt Modes
- "Slim Head" design Reduces Light Gaps
- Quiet Operation



# NOTES

C	CONTENTS		
1	ASSEMBLY		
2	WIRING		
2.1	Power options		
3	P1 BUTTON FUNCTIONS		

	SET-UP 8
3.2	configuartion options 7
3.1	state test 7

5		10
4.3	Set limits	9
4.2	Check motor direction	8
4.1	Pair motor with controller	8

ADDING OR REMOVING CONTROLLERS AND CHANNELS	11
Adjust lower limit	10
Adjust upper limit	10
	Adjust lower limit

6	ADDING OR REMOVING CONTROLLERS AND CHANNELS	11
6.1	Using motor P1 button	11
6.2	Using a pre-existing controller	11
7	FAVORITE POSITIONING	12
7.1	Set a favorite position	12
7.2	Send shade to favorite position	12
7.3	Delete favorite position	12
8	TILT & ROLLER MODE	13
8.1	Enter tilt mode	13
8.2	Enter roller mode (Default)	13
9	SLEEP MODE	13
10	TROUBLESHOOTING	14

#### 3 | Automate Programming Instructions | AC Tubular Motors

### WARNING: Important safety instructions to be read before installation.

Incorrect installation can lead to serious injury and will void manufacturer's liability and warranty.





### CAUTION

- Do not expose to moisture or extreme temperatures.
- Do not allow children to play with this device.
- Use or modification outside the scope of this instruction manual will void warranty.
- Installation and programming to be performed by a suitably qualified installer.
- For use within tubular blinds.
- Ensure correct crown and drive adaptors are used for the intended system.
- Keep antenna straight and clear from metal objects
- Do not cut the antenna.
- Use only Rollease Acmeda hardware.
- Before installation, remove any unnecessary cords and disable any equipment not needed for powered operation.
- Ensure torque and operating time is compatible with end application.
- Do not expose the motor to water or install in humid or damp environments.
- Motor is to be installed in horizontal application only.
- Do not drill into motor body.
- The routing of cable through walls shall be protected by isolating bushes or grommets.
- Ensure power cable and aerial is clear and protected from moving parts.
- If cable or power connector is damaged do not use.

#### Important safety instructions to be read prior to operation.

- It is important for the safety of persons to follow the enclosed instructions. Save these instructions for future reference.
- Persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge should not be allowed to use this product.
- Keep remote controls away from children.
- Frequently inspect for improper operation. Do not use if repair or adjustment is necessary.
- Keep motor away from acid and alkali.
- Do not force the motor drive.
- Keep clear when in operation.




# 1 ASSEMBLY

Please refer to Rollease Acmeda System Assembly Manual for full assembly instructions relevant to the hardware system being used.






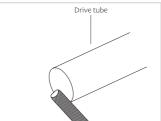

Step 3. Fit required crown, drive and bracket adapters.

Step 2. Ensure roller tube is clean and free from burrs.

Tube must be close fitting with chosen crown and drive adapters. Refer to Rollease Acmeda System Assembly Manual for recommended crown, drive, and bracket adapter kits.

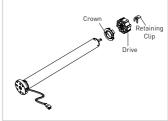




Insert by aligning keyway in crown and drive wheel to the tube.



Refer to Rollease Acmeda System Assembly Manual for recommended crown, drive, and bracket adapter kits.

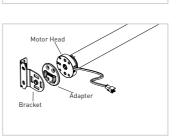




# 2 WIRING

### 2.1 Power options

Cut off the mains power supply

Connect the motor according to the information in the table below.

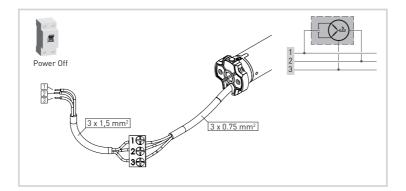

Range	Neutral	Live	Earth
220-240V	Blue	Brown	Yellow / Green
100-120V	White	Black	Green



Ensure cable is kept clear of fabric.

Ensure antenna is kept straight and away from metal objects.

# **3 P1 BUTTON FUNCTIONS**


#### 3.1 Motor state test

This table describes the function of a short **P1** button press/release (<2 seconds) depending on current motor configuration.

P1 Press	Condition	Function Achieved	Visual Feedback	Audible Feedback	Function Described
	If limit is NOT set	None	No Action	None	No Action
Short Press	If limits are set	Operational control of motor, run to limit. Stop if running	Motor runs	None	Operational control of motor after pairing and limit setting is completed first time
	If motor is in "Sleep Mode" & limits are set	Wake and control	Motor wakes and runs in a direction	None	Motor is restored from Sleep Mode and RF control is active


#### 3.2 Motor configuartion options

The P1 Button is utilized to administer motor configuration as described below and beginning in Section

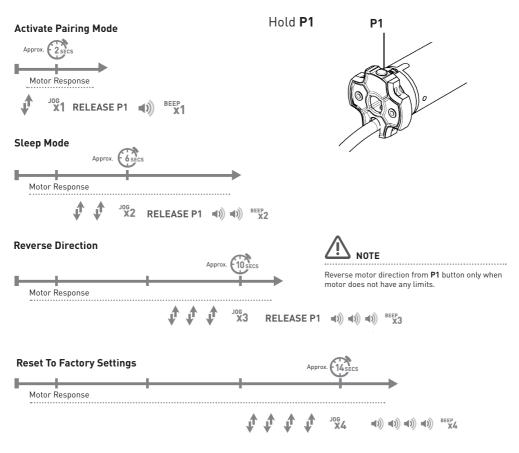


# 4 INTIAL SET-UP

### 4.1 Pair motor with controller

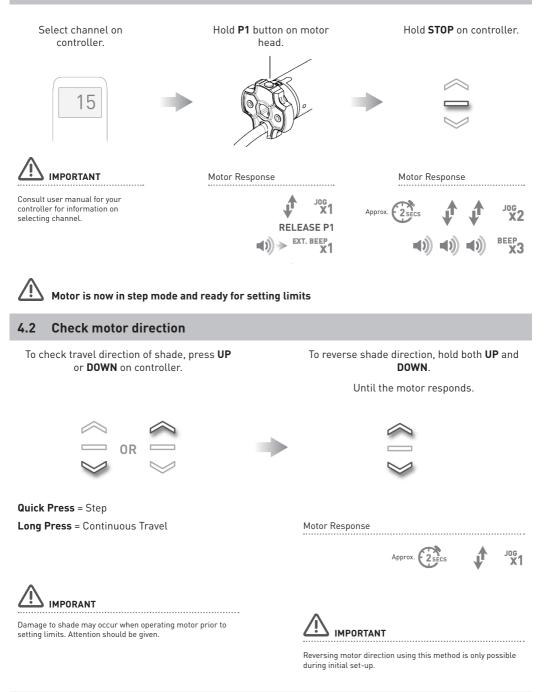


#### 4.3 Set limits

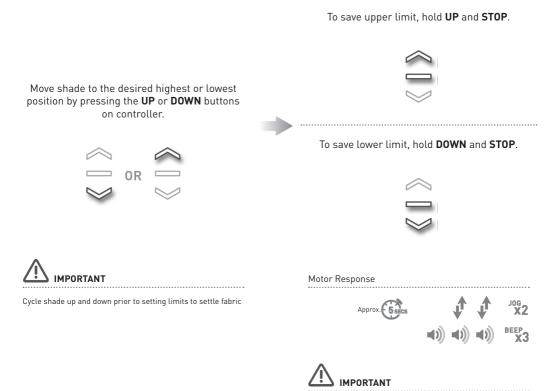

After setting limits, motor will automatically exit from initial set-up mode.

🖄 Initial set-up is now complete

#### 5.1 Adjust upper limit

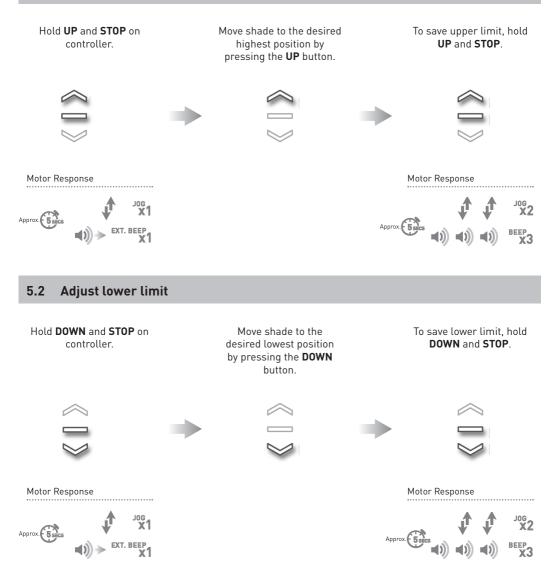


# 6 ADDING OR REMOVING CONTROLLERS AND CHANNELS

### 6.1 Using motor P1 button

Hold **P1** button on motor head.

#### Hold **STOP** on controller to add or remove.

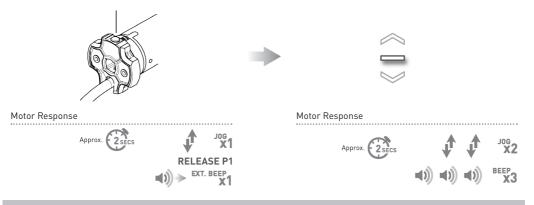


### 6.2 Using a pre-existing controller

- A= Exisiting controller or channel (to keep)
- **B=** Controller or channel to add or remove
- Press P2 on existing Press P2 on new Press **P2** on existing controller. controller. controller. R Δ Δ Motor Response Motor Response Motor Response . . . . . . . . . . . JOG X2 JOG JOG х**1** х**1** BEEP BEEP BEEF **ÿ1 x1**



### 7.1 Set a favorite position

Move shade to the desired position by pressing the UP or DOWN button on the controller.

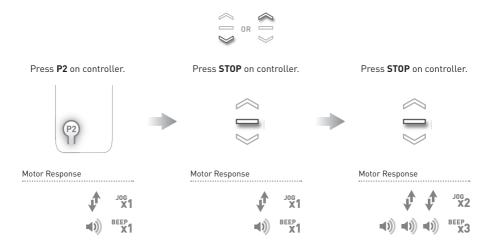


#### 7.2 Send shade to favorite position

Hold STOP on controller.




### 7.3 Delete favorite position

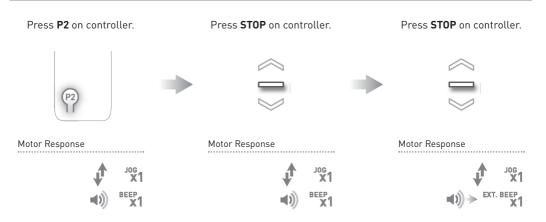

## 8 TILT & ROLLER MODE

#### 8.1 Enter tilt mode


For slat adjustment on venetians.

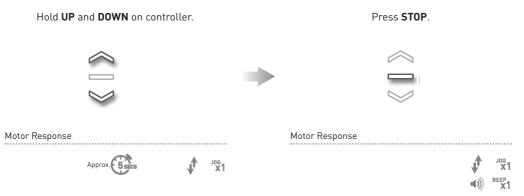

#### 8.2 Enter roller mode (Default)

Hold **UP** and **DOWN** on controller.


Press STOP.

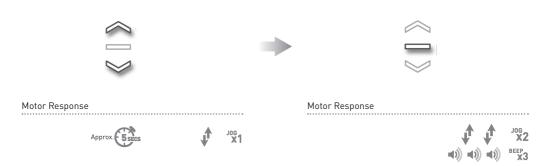


# 9 SLEEP MODE

#### **Enter Sleep Mode**

Sleep mode is utilized to prevent a motor from moving during shipping of a fabricated shade






#### **Exit Sleep Mode**

Exit sleep mode once the shade is installed

Press and release **P1** button on the motor head



Problem	Cause	Remedy
	Batteries in wand are depleted	Replace 8 x AA alkaline batteries.
	A/C power supply not plugged in.	Check motor to power cable connection and AC plug.
	Transmitter battery is discharged	Replace battery
Motor is not responding	Radio interference/shielding	Ensure transmitter is positioned away from metal objects and the aerial on motor or receiver is kept straight and away from metal
	Receiver distance is too far from transmitter	Move transmitter to a closer position
	Power failure	Check power supply to motor is connected and active
	Incorrect wiring	Check that wiring is connected correctly (refer to motor installation instructions)
		Always reserve an individual channel for programming functions
Cannot program a single Motor (multiple motors respond)	Multiple motors are paired to the same channel.	SYSTEM BEST PRACTICE - Provide an extra 15 channel controller in your multi motor projects, that provides individual control for each motor for programming purposes
		Place all other motors into sleep mode (ref to <b>P1</b> button function overview - Section 3)

# NOTES

ROLLEASE ACMEDA AUSTRALIA

110 Northcorp Boulevard, Broadmeadows VIC 3047 T +61 3 9355 0100 | F +61 3 9355 0110

#### ROLLEASE ACMEDA

USA 200 Harvard Avenue Stamford, CT 06902 6320 T +1 203 964 1573 | F +1 203 964 0513

#### ROLLEASE ACMEDA EUROPE

Via Conca Del Naviglio 18, Milan (Lombardia) Italy T +39 02 8982 7317 | F +39 02 8982 7317

info@rolleaseacmeda.com rolleaseacmeda.com Queensland Branch Unit 2/62 Borthwick Avenue, Murarrie QLD 4172

