

Instructions for SafetyHold3

To properly assemble the bead chain and cord loop tension device, please flip this card over for complete step-by-step instructions.

A WCMA 5.2.4 Warning Tag (available from RollEase) must be fastened to the device prior to shipping. The SafetyHold3 must be secured to the clutch or headrail to make the shade inoperable without purposeful action of installer.



Use appropriate anchors when installing.

Parts Included



Base



Guide



Insert



Spring



Screws

SafetyHold3™

To order more, phone Customer Service

at **800.552.5100** or **203.964.1573**

For additional Product Information,
visit **www.rollease.com**





1
Slide bead chain or cord through base entering through the rounded part of base following through the flat end.



2
Slide the same end of the bead chain or cord through the spring following the base.



3
Hook the guide through the end of the bead chain or cord.



4
Pull the spring back down the chain so it is completely over the guide and rests on the bottom legs.



5
Using thin needle nose pliers, grasp entire spring on both sides with the guide legs pointing up and squeeze until completely compressed together.*



6
Once the spring is fully compressed, turn insert on an angle and push through the guide legs.


* Keep pliers all the way to one side (next to one leg of the guide) to allow room for insert to be pushed through in Step 6.



7
Turn the insert flat and then release the spring. For cord, the serrated edge should face cord. For bead chain, the smooth edge should face chain.



8
Slide base back down the bead chain or cord and over the guide.

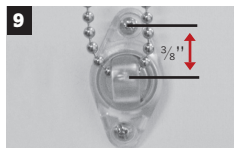

9
Pull tension device down until chain is taut on both sides. Mark the upper screw hole, and using screws provided, install tension device with upper hole $\frac{3}{8}$ " above mark.