


AUTOMATE™

QUICK START GUIDE Automate™ Control4 INTERGRATION SUPPORT

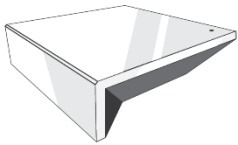

AUTOMATE PULSE HUB 2 OVERVIEW

Take your Automate experience to the next level by integrating Automate motorized shades into CONTROL4 Smart Home control systems. The Automate Pulse is a rich integration supports discrete shade control and features a two-way communication system offering real time shade position and battery level status. The Automate Pulse Hub 2 supports Ethernet Cable (CAT 5) and Wireless Communication (2.4GHz) for home automate integration using the RJ45 port conveniently located on the back of the hub. Each hub can support integration of up to 30 shades.

OVERVIEW:

Control4 Version Required	2.9.0 minimum
Developer	annex4
Initial Release Date	5/28/2019
Last Modified Date	5/28/2019
Support Email	automate@rolleasacmeda.com

Note: For support of real time updates the annex4 Link driver is required. You can find the driver at: <https://annex4.link/drivers/link>

HARDWARE INSTALLATION:

- Install all shades/blinds/motors at desired locations
- Connect the Hub to the Automate Pulse app
- Connect all shades/blinds/motors to the Automate Pulse app

DRIVE INSTALLATION:

1. Place the "Automate Pulse Hub" driver into the project.
2. Navigate to the Connections section and select the Network tab.
3. Enter the IP address of the Automate Pulse Hub.
4. Confirm that shades have been detected by looking at the Detected Drivers property.
5. For each shade that the "Automate Pulse Hub" has added to the connections add an "Automate Pulse Shade" driver to the project.
6. Bind the "Automate Pulse Shade" drivers to the "Automate Pulse Hub".
 - a) Once the connection has been bound the driver will automatically populate shade properties.
7. Set the 'Shade Movement Type' to 'Move' or 'Rotate' to determine what the driver should control.
 - a) 'Move' will control basic shade movement.
 - b) 'Rotate' will control the motor rotation.
8. Run the 'Calibrate' action on the shade, this will prepare the driver to calculate the travel times of the shades. By doing this the driver will accurately display ramp rates for a better user experience.
9. Refresh Navigators.

NOTE: Grayed out sections are part of the hub driver installation.

STEP 1: Search the driver via 'Automate Pulse Hub 2' in the right window panel. Double click to add to a room.

The screenshot shows the Composer Pro 3.0.0 interface. The 'System Design' panel on the left shows a tree view of rooms and devices. The 'Properties' panel in the center shows settings for the selected device. The 'Items' panel on the right displays a list of discovered devices, with 'Automate Pulse Hub v2' highlighted. The status bar at the bottom indicates 'Director Status: Getting Item' and 'Connected to 192.168.1.10 (SSL)'.

STEP 2: Enter the IP address of the Automate Pulse Hub v2.

The screenshot shows the 'IP Network Connections' panel in the Composer Pro 3.0.0 interface. The panel displays a table of network connections. The 'Automate Pulse Hub v2' device is listed with the IP address 192.168.1.233. The status bar at the bottom indicates 'Director Status: Idle' and 'Total Available Devices: 17'.

Device	Room	Type	Address Type	Address	IP Address
Automate Pulse Hub v2	Office		IP	192.168.1.233	192.168.1.233

STEP 3: The properties of the driver and discovered shade (5WE).

The screenshot shows the Composer Pro 3.0.0 interface. On the left is the System Design tree. The main window is split into three panes:

- Properties:** Shows settings for the selected driver:
 - Auto Update: OFF
 - Driver Version: 0.0.51
 - Server Version: (empty)
 - Debug Mode: OFF
 - Detected Shades: 5WE
 - Terminal: (empty)
- Items:** A list of discovered devices:

Device Name	Manufacturer	Discovered	Control Method	Location	Buttons
Automate Motor v2	Rollease Acmeda	2019-05-19 6:36 PM	Methods		LOCAL
Automate Pulse Hub v2	Rollease Acmeda	2019-05-24 3:15 PM			LOCAL
NX-584 RS-232 Automation Module	Interlogix	2016-11-08 12:00 AM			LOCAL
SuperBus 2000 RS-232 Automation Module	Interlogix	2015-09-21 12:00 AM			LOCAL
WoW Switch Keypad	Unique Automation	2016-01-29 10:00 AM			LOCAL
Auto Updater	Ryan Boucher	2015-06-23 2:28 PM			LOCAL
Door Auto-Lock (OS2 9+)	Control4	2017-12-13 9:35 AM			LOCAL
Aurora	Nanoleaf	2019-02-28 1:19 PM			LOCAL
Aurora	Nanoleaf	2018-07-11 9:24 PM			LOCAL
Network File Storage	Control4	2005-05-09 12:30 PM			LOCAL
Nvidia Shield	Nvidia	2017-12-06 8:36 AM			LOCAL
Automate Motor	Rollease Acmeda	2018-05-24 3:41 PM			Online

STEP 4: Connect to the shade (5WE) to an 'Automate Motor' endpoint.

The screenshot shows the 'Control & Audio Video Connections' window for the Automate Pulse Hub v2. It displays the following connections:

Name	Type	Connection	Input/Output	Connected To
LINK Reveval	Control	LINK_REVEVAL	Output	
Office - Roller - 5WE	Control	AUTOMATE_SHADE	Output	Automate Motor->Automate Pulse Hub 2

Below this, the 'AUTOMATE_SHADE Input Devices' table shows:

Device	Name	Location	Connections
Automate Motor	Automate Pulse Hub 2	Office	Automate Pulse Hub v2-Office - Roller - 5WE

STEP 5: Documentation available on the Composer Pro.

The screenshot shows the Composer Pro 3.0.0 interface. The central Properties window displays the documentation for the 'Automate Pulse Hub v2' driver. The documentation includes the Rollease Acmeda logo, an overview table, and detailed installation instructions for both hardware and drivers.

Property	Value
Control4 Version Required	2.9.0 minimum
Developer	annex4
Initial Release Date	5/28/2019
Last Modified Date	5/28/2019
Support Email	Automate@rolleaseacmeda.com

Hardware Installation

- 1) Install all shades/blinds/motors at desired locations
- 2) Connect the Hub(s) to the Automate Pulse app
- 3) Connect all shades/blinds/motors to the Automate Pulse app

Driver Installation

- 1) Place the "Automate Pulse Hub" driver into the project
- 2) Navigate to the Connections section and select the Network tab
- 3) Enter the IP address of the Automate Pulse Hub
- 4) Confirm that shades have been detected by looking at the Detected Drivers property.
- 5) For each shade that the "Automate Pulse Hub" has added to the connections add an "Automate Pulse Shade" driver to the project.
- 6) Bind the "Automate Pulse Shade" drivers to the "Automate Pulse Hub"
 - a) Once the connection has been bound the driver will automatically populate shade properties
- 7) Set the "Shade Movement Type" to "Move" or "Rotate" to determine what the driver should control
 - a) "Move" will control basic shade movement
 - b) "Rotate" will control the motor rotation
- 8) Run the "Calibrate" action on the shade, this will prepare the driver to calculate the travel times of the shades. By doing this the driver will accurately display ramp rates for a better user experience.
- 9) Refresh Navigation.

This driver is an Interface Controller for the Rollease Acmeda Automate Pulse Hub 2. It allows IP control over Rollease shades from CONTROL4.

DRIVE FOR THE MOTOR:

SUPPORTED FEATURES:

- Drag and drop installation
- Easy calibration of shade travel time
- Control of motor rotation and shade movement

PROPERTIES:

Property	Description
Auto Update	Enables or disables real time updates of the driver from annex4 For support of this property the annex4 Link driver is required
Driver Version	The current version of the driver
Server Version	The server version of the driver For support of this property the annex4 Link driver is required
Debug Mode	Reports information to the log and Lua output window
Modes	
Debug	Reports the data being moved around
Trace	Reports the flow of the driver
Info	Reports basic pieces of information
Warning	Reports any small issues that arise
Error	Reports any large issues that arise
Fatal	Reports issues that cause the driver to fail

Shade Movement Type	'Move' to control shade movement 'Rotate' to control motor rotation
Shade Address	The address of the shade
Shade Type	The motor type operating the shade
Shade Speed	The speed in rotations per minute
Reverse Operation	Reverse the UI level displayed
Open Travel Time	The time it takes for the shade to go from closed to opened in milliseconds
Close Travel Time	The time it takes for the shade to go from opened to closed in milliseconds
Current Motor Level	The current level of the motor, this is the opposite of what is shown in Control4. A motor level of 30 is displayed as 70 in Control4.
Current UI Level	The current level that Control4 is displaying

ACTIONS:

Action Name	Description
Stop	Stops the shade
Jog	Jogs the shade open
Open	Opens the shade
Close	Closes the shade
Calibrate	Create bindings for paired shades on the serial connection
Identify	Moves all other shades to 'Open' and sets this shade to '50' This allows a dealer to quickly identify a shade
Get Shade Info	Forces the driver to retrieve the shade information to update properties
Update Now	Updates the driver to the latest version

CONNECTIONS:

Control Name	Connection Type	Description
Automate Pulse Hub	AUTOMATE_SHADE	The communication binding that lets the shade relay commands to the hub driver
Open Button Link	BUTTON_LINK	Click to open, push to start opening, release to stop
Close Button Link	BUTTON_LINK	Click to close, push to start closing, release to stop
Toggle Button Link	BUTTON_LINK	Click to toggle, push to start the toggle, release to stop
Stop Button Link	BUTTON_LINK	Click to stop

FOR THE HUB:

SUPPORTED FEATURES:

- Simple installation of the hub driver by connecting the network connection;
- Automatically calculates the travel time of the motors accurate to within 50ms;

PROPERTIES:

Property	Description
Auto Update	Enables or disables real time updates of the driver For support of this property the annex4 Link driver is required
Driver Version	The current version of the driver
Server Version	The server version of the driver. For support of this property the annex4 Link driver is required.
Debug Mode	Reports information to the log and Lua output window
Modes	
Debug	Reports the data being moved around
Trace	Reports the flow of the driver
Info	Reports important pieces of information
Warning	Reports any small issues that arise
Error	Reports any large issues that arise
Fatal	Reports issues that cause the driver to fail

Serial Number	The serial number of the hub
MAC Address	The mac address of the hub
Detected Shades	Lists the addresses of all shades discovered on the hub
Terminal	Allows the dealer to manually send commands to the automate hub. Commands should be formatted with a starting "!" and an ending ";" Responses will show in the property shortly after the command is sent

ACTIONS:

Action Name	Description
Retrieve Shades	Create bindings for paired shades on the serial connection
Clear Shades	Clear the bindings created for shades on the serial connection
Close All	Closes all shades
Open All	Opens all shades
Calibrate All	Informs each motor endpoint to calibrate its motor travel times
Update Now	Updates the driver to the latest version

CONNECTIONS:


Control Name	Connection Type	Description
<Room>:<Shade>:<Address>	AUTOMATE_SHADE	The communication binding for a shade endpoint driver
Link Reveal	LINK_REVEAL	This connection is used for annex4's notification and display type devices. By using this binding, you can get notifications on display type devices with minimal programming.

COMMONS MISTAKES:

- Entering the wrong IP address in the "IP Address" configuration line.
 - If you're failing to discover devices double check this!

CONTROL4 SYSTEM CONNECTION:


INTEGRATION TOPOLOGY

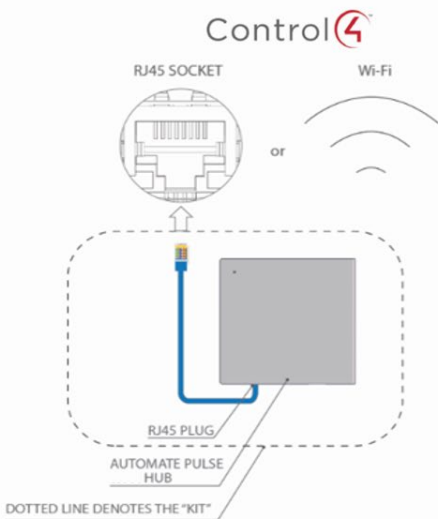

ADDITIONAL INFORMATION:


- The CAT 5 cable should be no longer than 100 meters (328ft).
- Router, switch or access point are required to connect the Hub via LAN connection;
- Wi-fi repeater is required depending on the cover of the Wi-fi Router signal.
- The AUTOMATE PULSE HUB 2 works only with Wi-fi in 2.4Ghz (not 5Ghz)

AUTOMATE PULSE HUB 2

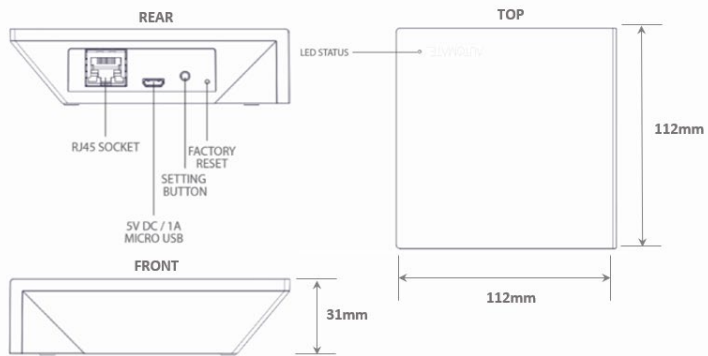

CONNECTIONS

The standard connections of the Automate Pulse Hub 2 is Ethernet or Wi-fi. For a LAN connection, you can use a straight Through wiring accordingly indicated below:

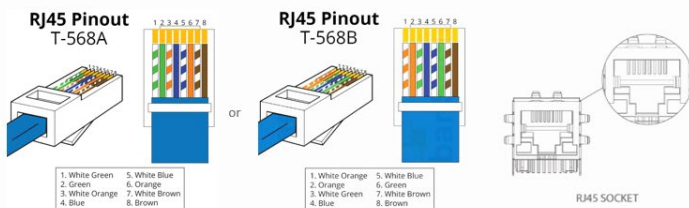

FREQUENTLY ASKED QUESTIONS

Q. No Pulse Hub 2 detected.

A. Make sure that your Automate Pulse 2 is connected to the correct network and get an IP Address available and still communicating with the network using the Automate Pulse App 2.

Q. Shade limits are not set properly.

A. Calibrate shade limits with your Rollease Acmeda remote before setting the appropriate open and close time within CONTROL4 SYSTEM.

Q. Shade is not moving at all.

A. Make sure the selected Pulse Hub 2 is the correct Pulse Hub 2 for the shade to be controlled. Confirm the correct bindings are set in the CONTROL4 System connections tab between the Pulse Hub 2 and Shade drivers.

Q. I have multiple Pulse Hub's 2, what do I do?

A. Load two Automate Pulse Hub 2 drivers. After selecting "Retrieve Hubs" located in the driver actions tab, you will see different Automate Pulse Hubs 2 - select the desired one.

Q. I don't see any shade bindings in the Pulse Hub 2 driver?

A. Select "Retrieve Shades" located in the driver actions tab.

Q. How do I scan for available Automate Pulse Hub's 2?

A. Once the Automate Pulse Hub 2 is properly connected via the Ethernet cable or Wireless network, navigate to the Automate Pulse Hub 2 Properties page within Composer. Select "Retrieve Hubs" located in the driver actions tab.

Q. We get unexpected responses from the CONTROL4 system, or "?" symbols

A. Ensure that all connections using the ethernet port or Wi-Fi are working properly. The missed connection has been known to yield unwanted or unexpected results.

SUPPORT RESOURCES:

For further assistance, contact your retailer, visit our website at www.rolleaseacmeda.com.